

# FOOTWEAR FITTING GUIDE

WOMEN & GIRLS - SIZE 3 to 14													
	SIZES SMALLER					STREET SHOE SIZE			SIZES LARGER				
	-3	-2.5	-2	-1.5	-1	-0.5				+0.5	+1	+1.5	+2
<b>BALLET &amp; POINTE</b>	176 P103	191					120 205 2032 CG2002	173 2027 205S FS1	200 2030 215 2033	102 115 117 196 197 198 199 2028 H10			
<b>TAP &amp; CHARACTER</b>			M60 445	442 CG57 K360 K-360			455 551 650 656 700 3800 CG55	456 561 653 657 825S CABARET CG100	459 625 654 658 828 CG16 CHORUS	550			
<b>JAZZ &amp; DANSNEAKERS</b>							344 DS10 DS22 EJ2 TS2	CG02 DS11 DS24 FREE1 PP11	DS03 DS19 EJ1 TS1	358 CG05 CG15 DS15			
<b>GYM &amp; MODERN</b>	H03						106 391 PP323	110 H06 H07FB	321 H07 FF01				
<b>DANCESPORT</b>			BR01 BR02 BR65				BR05 BR11 BR19 BR25 BR58 BR74 BR46S BR64S BR72S SD01	BR08 BR14 BR23 BR32 BR68 BR44S BR47S BR66S BR73S SD02	BR09 BR18 BR24 BR40 BR69 BR45S BR63S BR67S BR75S				

CHILDREN - SIZE 6 to 2.5												
	SIZES SMALLER			STREET SHOE SIZE			SIZES LARGER					
	-3	-2	-1				+0.5	+1	+1.5	+2		
<b>BALLET &amp; POINTE</b>	176X P103X 191X		CG2002C	205C 205X 215X FS1C	205SC 215C 2030C FS1T	205T 215T 2033C			200C 200T 200X			
<b>TAP &amp; CHARACTER</b>		442C CG57C		455C 625T 3800T CG100C	457C 625X CG16C FS3C	625C 3800C CG55C			550X			
<b>JAZZ &amp; DANSNEAKERS</b>				CG02C DS11C EJ1C PP323C	DS03C DS19C EJ2C	DS10C DS24C FS4C			358C CG05C CG15C DS15C			
<b>GYM &amp; MODERN</b>			H03X 321C	106C H06C	110C H07C	321C						
<b>DANCESPORT</b>				BR72SC	BR73SC							

MEN & BOYS - SIZE 6 to 12														
	SIZES SMALLER			STREET SHOE SIZE			SIZES LARGER							
	-3	-2	-1				+0.5	+1	+1.5	+2				
<b>BALLET</b>				2020	2021	2031			200			CG2002		
<b>TAP &amp; CHARACTER</b>				442 445 M60	442B CG57 k-360	442C K360						CG55 CG100 CG16 DS18		
<b>JAZZ &amp; DANSNEAKERS</b>				BF1 BF2B	BF2 DS15M	BF1B DS22M						344 CG05 DS10 DS19 EJ1 TS1	358 CG15 DS11 DS22 EJ2 TS2	CG02 DS03 DS15 DS24 FREE1 PP11
<b>GYM &amp; MODERN</b>			H03									103 321 H07FB	106 H06 FF01	110 H07 PP323
<b>DANCESPORT</b>				BR01 BR28	BR02	BR65							BR74	